

### GETTING TO KNOW YOUR CAMERA


1. Menu Button, 2. Mode button, 3. Activity Light, 4. Charge LED, 5. Joystick, 6. Power button, 7. Shutter Button, 8. LCD screen, 9. SD card Slot, 10. USB jack, 11. Flash, 12. Self-timer indicator, 13. Lens, 14. Clip

Five-way button


Upward  
Leftward Rightward  
Downward

**Turning on/off the camera:** To turn on the camera, press the power button. The LCD screen and the busy light will turn on. Pressing the power button again will turn off the camera.

 

 
### Taking Pictures

Press the power button to turn the camera on and enter still image capture mode; if the camera is in playback or video capture mode, press the mode button until the  flashes briefly on the screen and remains in the upper left corner of the screen to indicate capture mode. Press the shutter button to take pictures.



### Video recording

Press the mode button till the icon "  " flashes briefly on the screen and appears in the upper left corner of the screen. Press the shutter button to start recording, and press the shutter button again to stop recording the video.

 
 
 
### Still Image Review

Press the Mode button until the icon  flashes on the screen to enter playback mode. Push the joystick left/right   to show the previous or next image or video file. When previewing images, press the down button to display the index screen.

 
 
### Playing video files

Press the mode button to enter playback mode. Push the joystick left/right   to select video file (AVI). Press the shutter button to play video file and press shutter again to end playing.

### Thumbnail Images


Press the menu button in image playback mode when the images are showed in single full screen mode, then push the joystick up/down   to select "thumbnail", push the joystick right  to display the index screen. You can also push the joystick down to enter the thumbnail mode while a still image is displayed.

### Deleting files

In playback mode press the menu button to enter the menu interface, push the joystick up/down   to select "delete current" or "delete all". Select "Delete Current" will delete the current image or select "Delete All" to delete all the files.

Push the joystick right to confirm and exit. You can also push down on the joystick in playback mode; a dialogue box "Confirm delete? Yes, No" will appear. Select "Yes" by pushing the joystick left and push down on the joystick down to delete the selected file.

### Image download

Set the USB mode to "mass storage", and then the camera becomes a removable storage device. Connect the USB cable with PC and the camera. Double click the icon "My computer" on the PC Desktop. Double click "  ". Double click the "DCIM" file folder. Your saved files will be located in this folder. Save them to a preferred location on the computer, and then you can delete them from the camera.

Note: Do not take out the SD card while files are being copied to the PC, otherwise the pictures might be destroyed.

### Battery Life

For best results, we recommend fully charging your camera's battery before use. This should take four to six hours.

### Manual

A full manual is available on the Driver/Software CD included with the camera and on our website [www.arguscamera.com](http://www.arguscamera.com).

Thank you for purchasing the Bean by Argus. We hope that you enjoy your camera. If you require technical support, our technical support specialists are ready to help you. They can be reached by sending an email to [support@arguscamera.com](mailto:support@arguscamera.com) or calling our toll-free number 888-552-7487.